

# POE - PAG - DYE INJECTOR KIT

## Kit Contents:



## Instructions for Use:



Unscrew bottom cap of injector  
Remove from injector body



Adjust injector piston to desired fill level by turning top handle counter clockwise




Fill injector up to starting point of cap screw threads. **DO NOT OVERFILL.**



Connect hose to injector cap



Re-attach injector cap to injector body (hand tight)

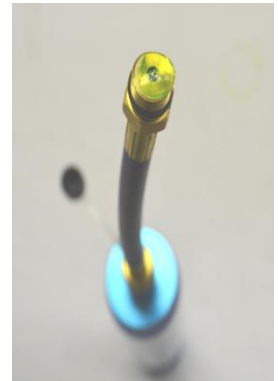

Turn injector piston clockwise until fluid appears at hose tip



Connect Low side A/C Service port coupler (confirm snug fit with a wrench)

## Your oil injector is ready for use

NOTE: Use labels to prevent oil and dye cross contamination; Place labels in the recess provided on the injector body.