


## 10.3 Activation

The equipment has a demo mode (**Demo**).

The equipment can be used in **Demo** mode for a **maximum cycle of 15 power on-power offs**.


The equipment blocks automatically at the end of the cycle and can no longer be used.

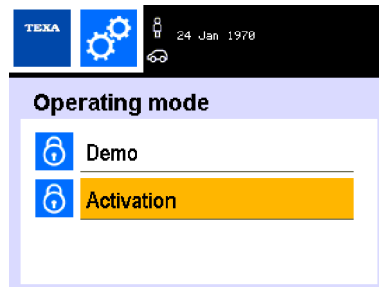

To activate the service station, proceed as follows:

1. Visit the website [eFluidVAS.texa.com](http://eFluidVAS.texa.com)

2. Press **PRODUCT ACTIVATION**.

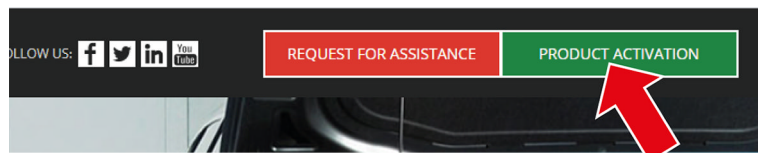

3. Identify the **Serial Number** on the data plate.

The data plate can be found on the rear side of the equipment and on the packaging.

*An example of data plate is indicated in the image.*



4. Fill in the form by entering all the required data.

5. Enter the activation countercode provided by TEXA's assistance center in the software.